

RLIS20001 LITHIUM-ION IMPACT DRIVER SPARE PARTS LIST

Exploded view No.	Part name	qty	Exploded view No.	Part name	qty
1	Steel Ball Retainer Spring $\phi 1.2$	1	19	Bearing	1
2	Steel Ball Retainer Inner Pressure Plate	1	20	Middle Cover	1
3	Steel Ball Retainer Spring $\phi 0.8$	1	21	Motor Gear	1
4	Impact Driver Steel Ball Retainer	1	22	Stator	1
5	ST4.2*18 Cross Pan Head Screw	4	23	Rotor	1
6	Head Housing	1	24	Rear Housing Cover	1
7	Flat pad $\phi 30.2 * \phi 40 * 2.5, 65\text{Mn}$	1	25	ST3*16-F Cross Pan Head Screw	13
8	Head housing Socket	1	26	Right Housing	1
9	O-Ring $\phi 27.5 * \phi 1.5$	1	27	Switch	1
10	O-Ring $\phi 14 * 2$	1	28	Reversing Switch	1
11	Small Steel Ball $\phi 4$	3	29	Battery Indicator Panel	1
12	Impact Driver T-Type Shaft	1	30	Impact Driver Control Board	1
13	Impact Driver Striking Block Assembly	1	31	Retainer Body Plug	1
14	Planetary Gear	3	32	Illumination Lamp Cover	1
15	Cylindrical Pin $\phi 5 * 8$	3	33	Left Housing	1
16	Flat pad $\phi 21 * 15.1 * 0.8$	1	34	Rubber Column $\phi 4 * 8$	2
17	Gear Ring	1	35	Nylon Zip Tie 2*100	1
18	O-Ring $\phi 48 * 1$	1			

