

RAG110001 ANGLE GRINDER SPARE PARTS LIST

Exploded view No.	Part name	Qty	Exploded view No.	Part name	Qty
1	Outer Flange	1	28	Washer 8.3*16.9*0.3	1
2	Grinding wheel blade	1	29	Armature	1
3	Inner Flange	1	30	Dust ring	1
4	Grinding wheel cover	1	31	607 Bearing	1
5	Screw M4*16	4	32	Bearing sleeve	1
6	Output shaft	1	33	Fan cover	1
7	Dust cover	1	34	Rubber column	2
8	Front cover	1	35	Stator	1
9	O-ring	1	36	Motor housing	1
10	6201 Bearing	1	37	Carbon brush holder	2
11	Ring	1	38	Carbon brush	1
12	Big gear	1	39	Screw ST3X10	4
13	Pinion	1	40	Coil spring	2
14	M6 Nut	1	41	Capacitance	1
15	Screw ST4.2*22	4	42	Switch	1
16	HK0810 Needle bearing	1	43	Switch pusher	1
17	O-ring φ4*1	1	44	Switch tie rod	1
18	Self-locking pin	1	45	Carbon brush	1
19	Self-locking spring	1	46	Screw ST4X14	2
20	Self-locking cap	1	47	Tension disc	1
21	Gear cover	1	48	Sheath	1
22	Washer 6.2*18.9*0.3	1	49	Rear cowl	1
23	608 bearing	1	50	Screw ST4X14	1
24	O-ring φ21.5*1.8	1	51	Cable	1
25	Wool top	1	52	Side handle	1
26	Bearing pressure plate	1	53	Wrench	1
27	Screw M4*10	2			

